



P.O. Box 670 Hoschton GA 30548 USA  
Tel: (706) 654-3232 Fax: (706) 654-3888  
E-Mail: [sales@ibis-usa.com](mailto:sales@ibis-usa.com) <http://www.ibis-usa.com>

Technical Bulletin: 103113


### **SRV (Sealed Rotary Valve) Disassembly Instructions:**

Attached are photos of an SRV. Each photo is noted as to what will be required in order to remove the cam plate inside and have all multiple (5) taps working at the same time. Below are instructions as well.

Remove the 10mm bolts holding the back plate to the cone. There will be silicone between the two so you will have to cut / pry the pieces apart. (photo 1)

Do not remove the damaged motor. Lay the back plate with motor down and you will see the silver cam plate. There is a set screw holding this to the motor shaft. Loosen it and then gentle pull or pry the plate off. This will open up all ports for cleaning all nozzles at the same time. (photo 2)

Photo 3 shows what you should see once parts are removed. You can now reassemble the back plate with motor to the cone. This will allow continuous cleaning on all nozzles at the same time.

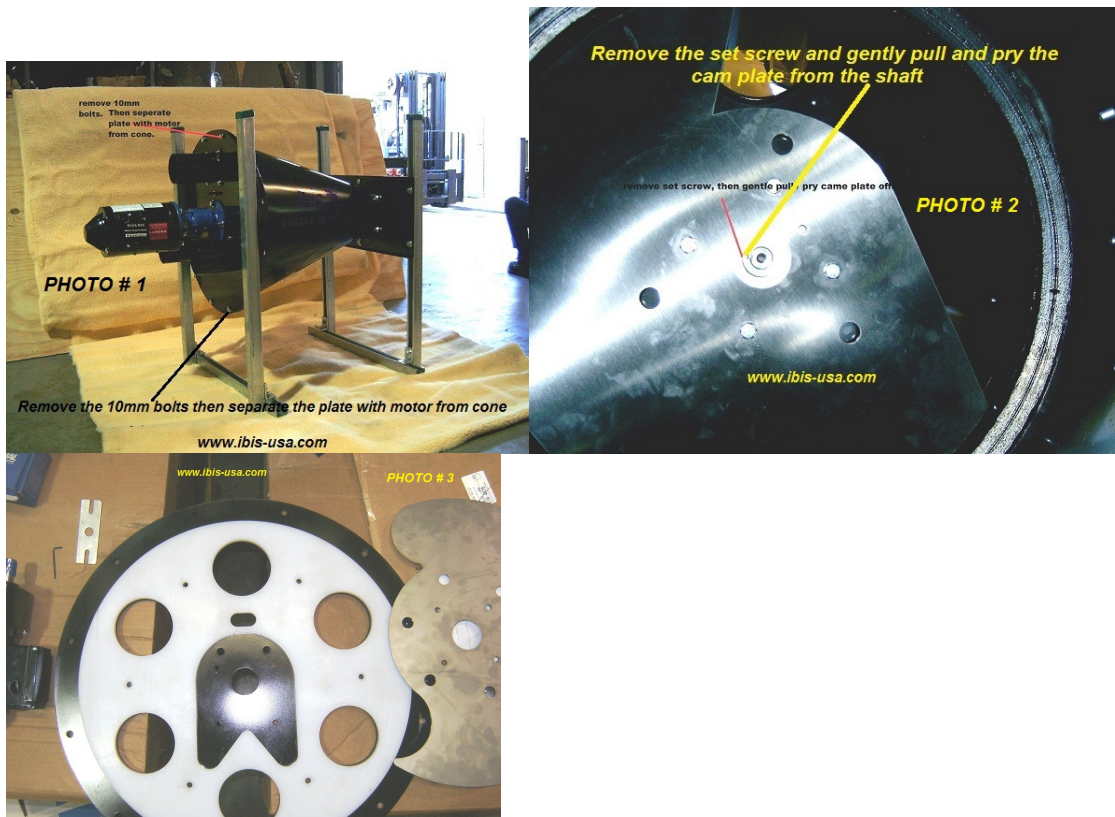

*ibis...your global air and fiber handling specialist*

